

Cobalt X

User Guide

Click on one of the links below to open the user guide for your Cobalt X firmware version.

You may need to check your data logger's firmware version on the screen directly by pressing **Menu** (menu bar) → **Settings** → **More** → **Information**



[Firmware version 2.10/2.11/2.12](#)



[Firmware version 2.9](#)



[Firmware versions 2.4 to 2.8](#)